

FUJI LABS

Digital Photo Frame Firmware Upgrade Instructions

1. Please use a 1GB or smaller SD memory card, and empty the memory by formatting it using the computer.
2. Save the update firmware in to the SD card. (Please do not change the file name.)
3. Place the card in to the Photo Frame (if there are other file in the memory card, it will not start the updating process), and turn it on.
4. Go to photo, you should see one selection of SD/MMC.
5. Press ENTER, it should start the update process. (it will take about 5 mins to complete)
6. When the updating process has completed, it will automatically restart itself.
7. Digital Photo Frame will now have 2 different modes to display images, "Fit Screen," and "Full Screen." Please choose between those 2 modes accordingly to maximize the display resolution from images.