

Fuji Labs e-Book User's manual

for 3 series e-Book

Thank you for purchase e-Book reader. This manual describes various functions of the e-Book, which ease the operation of the e-Book reader and brings value to your enjoyment. Please read this user manual carefully before initial use.

Note:

1. Please completely charge and discharge battery for the first 3 recharging cycles. The battery will then be ready for repeated charge and usage afterward.
2. In order to prevent data loss, we recommend the users to backup important data, especially before the firmware update.
3. This product is a high-precision electronic product, please do not disassemble it.
4. Avoid heavy vibration and collision to the player.
5. Avoid using the player in the following environments: extreme temperature, humidity, dust, strong magnetic fields, and exposure under sunlight.
6. Can clean with wrung wet cloth and wipe the cover of the reader gently. It is strictly prohibited to use any chemical cleaning solutions.
7. This player shall not be subjected to water droplet and water splashing.
8. When listening, please adjust the appropriate volume to avoid hearing damage.
9. Please do not disassemble any part of the reader.
10. Please use batteries, chargers and accessories that came with the reader or from the original manufacturer, failed to use the original equipment and accessories will void the manufacturer's warranty.
11. Follow the relevant local environmental protection regulations.
12. If you have any questions during operation, please contact your local dealer or retail companies' customer service center.
13. Product specifications and information is subject to change without any further notice. We apologize for any inconvenience.

Special Note:

In order to facilitate reading, you can save your favorite e-Books in "Book" folder, for easy and convenience reading experience.

● **Appearance and the Key definition**

1. Direction key: In the main interface and content list interface: press direction key to choose files. In content interface, press direction key to select the upper and lower directory

2. ON/OFF Switch: Push switch key to "On" to turn on the unit, Power off: Hold ESC to save the setting before switch to "Off" side.

3. Esc: Press the button to return to the previous interface. Hold “Esc” Key to return to the main menu.

● Data transfer, Charging Steps

Data transfer

Connect the player to the computer by USB cable, copy the files you need from the computer, and then paste them to the reader.

Charging Steps

1. Using the standard USB cable

Step one: using the USB cable connect the reader and computer's USB port (do not use the USB ports located in the front of your PC, it extends the charging time)

Step two: After connected to the computer correctly, the computer screen will appear on-line icons, double-click the bottom on the lower right hand side of your desktop then select “Safely remove hardware” to remove equipment. If reader is not removed from PC, it automatically charges the battery.

2. Use the charger for charging

Special Note: the selected charger specifications must meet the following requirements; failed to do so will cause critical damage to the reader.

Input: AC110V~240V 50/60Hz Max:150Ma

Output: DC5.0~5.5V 1000mA(USB) 1500mA(DC)

● Detailed function


1. Open the E-reader


Press and hold the power on/off button for 3-5 sec to turn the reader on.

2. Main interface


This interface shows all functions included in the device. If you want to enter the submenu, you can select the icon which you need.





 Battery indication, displays the batter capacity, Please charge it promptly when indicates empty.

 22:22: Time indication.


 20: Volume Indication


: Home, touch the icon to return to main menu.


: Music: touch the Icon to enter Music interface


: Video: Touch the Icon to enter Video Interface.


: Picture: Touch the Icon enter to Photo browse interface

: Record: Touch the Icon to enter Record interface


: E-book: Touch the Icon to enter E-book read interface.


: Application: Touch the Icon to enter Application interface. It can play 256 bit game In this interface.


: Browser: Touch the Icon to enter Files browser interface. User can find all files include music, video, photo, and e-book files, etc.


: Setting: about, OTG connect; Video setting, Time set, Display, Bright time, Sleep off, Auto off, Speaker, Language, Lock time setting, Calibrate Touch screen, Channel Setting, and Default Setting.

: Last read: Touch the Icon to enter the files last read.


: Recently Viewed: Touch the Icon to enter the browse history, you can view the recently opened document (Most recent 30 files at most).

: My favorites: Touch the Icon to enter the “My favorites” interface.

: My Library: Touch the Icon to enter the “My library” interface, user can find all E-book files except PDF files.










: Library manger: Touch the Icon to enter the “Library Manager” interface, user can find all E-book files.

Music playing

In the main menu interface, touch  Icon to enter Music playing interface.

Operation.




In the music playing interface, touch Icon on screen to select Playing functions.




- 1) Play/Pause. connect the earphone to the player, choose the music from the list, press the  to start playing, press  to pause or touch “and” icon on the screen to stop.
- 2) Press the Direction key to choose the pre/next song or touch the Icon and  on the screen .
- 3) Fast forward/quick return: press and hold “previous/next” key to fast forward the song.
- 4) Repeat mode: Touch  Icon to choose Repeat mode: Order , Shuffle ; and Repeat once.
- 5) EQ setting: Touch  Icon to choose EQ mode: normal, MSEQ, Rock, Pop, classic, Bass, Jazz, user EQ,
- 6) A-B repeat:: Touch  Icon to choose A-B repeat read function

Music Setup



- 1) Play mode: repeat all; Order , Shuffle ; Repeat once.
- 2) 3D audio setting:
 - Open/ Close 3D
 - Sound output Setting: General headphones; HI-FI headphone, General speaker; larger speaker.
 - 3D processing: Close; weak; medium; strong
 - Automatic volume Balance: OFF/ON
 - Bass: Close; weak; medium; strong
 - HF Compensation: Close; weak; medium; strong
- 3) EQ Setting: Normal; Jazz, Pop, Rock, Classic; Vocal; Treble; Bass.
- 4) Background Play: ON/OFF
- 5) Update Jukebox

Video playing




In the main menu interface, touch  Icon to enter Video content interface. Press “Previous/next” direction key to choose video and touch video name to start playing, press “up/down” to adjust the volume, press  to return to the previous interface. Touch  Icon to return to the main menu.







- 1) touch the video icon to get the video list, touch the name of the video it will start playing.
- 2) In the Video content interface. Touch the “Sort” icon to sort by name; sort by time; and sort by type.
- 2) under video playing mode, press and hold or to speed up or quick move back.
- 3) volume adjust: under video playing mode, Touch “ 20”icon to adjust the Volume

4) When playing videos, press “M” key, to spring out function menu: TV-out setting; Fix time Play; screen Controls ;Continue play , and Channel Setting.







5) Pre/next change, press  and  to change the pre/next movie or press Direction key.

Picture browsing




In the main menu interface, touch  icon to enter picture content interface, press “Page up/page” or “previous/next” key to choose photo , touch photo name to start browse, touch the  to return to the previous interface. Press  Icon to return to the main menu.

In the picture browse interface, touch “” to rotate picture, touch “” icon to set the current picture as background, touch “/”” to start /pause picture browse, touch “/”” icon to change/rotate picture .

Record

In the main menu interface, touch  icon to enter record interface, touch “” icon to set quality (high quality, mid quality, Low quality), press “” icon to start/pause record. Touch “” icon to save recording, and press  to return to the previous interface. Press  Icon to return to the main menu

e-Book reading

In the main menu interface, touch  icon to enter e-book content interface, touch photo name to start e-book reading, touch  to return to the previous interface, touch  Icon to return to the main menu.

In the e-book reading interface (HTML, HTM, TXT, PDB File format). Touch “Menu” Icon to spring out submenu: Autoplay, Jump To, Bookmark, Chapter, Font size, Fonts, Rotate, color, TTS; touch “Reading” icon to activate “TTS” function. Touch “annotation” Icon to spring out “Annotation,” ”Delete this,” ”Delete all“ submenu, touch submenu to execute “add Annotation” and “Delete Annotation” functions (the function are available for HTML,HTM,TXT,PDB File format only). Touch “Music” Icon to spring out Music player, it can start/pause music and change previous/next music directly on the music player. Touch “previous/next” Icon to change the content page.


Submenu function Specification

Autoplay: Perline, Perpage, Smooth,

JumpTo: adjust page number and touch “ok/cancel” to Jump pages or cancel page jump function

Bookmark: add bookmarks or Delete Bookmarks.

Chapter:

Ftsize: Font Size; Line width, flow touch  to change font size and Line width, touch “OK/cancel” to execute functions.

Fonts:

Rotate: Touch the Icon to rotate E-book reading direction

Color: font color; Bkg color setting; Flow touch Color strip (Red, Green, blue) to adjust color, touch “ok/Cancel” to confirm color changes.


TTS: Touch the Icon to spring out TTS setting menu: Woman/ man; slow/normal/fast; none/wander/echo; Robert/chorus/Reverb/eccentric. Choose setting option you need, then touch “OK/Cancel” to execute the function,

In the E-book reading interface(PDF,UMD),Press “M” key to spring out: Back to program; zoom in/out; Rendering size; display setting; Jump To, Esc,

Application

In the main menu interface, touch  Icon to enter Application interface. It can play 256 bit game In the interface,

Browse

In the main menu interface, touch  Icon to enter Files browser interface. User can find all files include music, video, photoset-book files and so on.

System settings

In the Main menu interface, touch  icon to enter setting interface.

- 1) About: hardware and software information
- 2) OTG connects: This feature only functions when external hard drive or expanded storage capacity is connected.
- 3) Video setting:
Continue play: On/off;
Zoom Mode: Normal, fill box, full screen, fit 110%, Fit 120%, Zoom 100%;
aspect Ratio :Auto Detect; 4:3 ; 12:11 ; 10:11 ;16:9; 16:11; 40:33 ; 2.35:1; 1:1
DHMI Mode: 720p_50HZ, 720p_60HZ; 576P; 480p
- 4) Time Set:
- 5) Display: Background lights; Back to Default Background
- 6) Bright time: 5s, 10s, 15s, 20s, 30s, Always on
- 7) Sleep Off: 10 min, 30 min, 1hour, Switch off
- 8) Auto off: 10 min, 30 min, and 1hour, close
- 9) Speaker: Off/ON
- 10) Language: Chinese; English, Multi-language
- 11) Lock time setting: 5s, 10s, 30s, 60s, 5min; No Locking
- 12) Calibrate Touch screen
- 13) Channel setting: Normal; Invert; Left; Right
- 14) Default Setting:

●Restart the player

If the player encountered an unknown operation and error messages appear, such as setting screen can not operational etc, push the switch key to off side. And restart again.

●Troubleshooting

- 1) Reader can not be properly turned on
Check the battery without electricity
Connect the charger and recheck it
If it can not be open after charged again, please contact our customer service
- 2) Earphone has no sound
Check the volume if it is set to “0”
Check the earphone connection to make sure it’s well connected
- 2) Serious Noise
Please check whether the earphone plug is clean. Dirt can lead to noise.

Check the music file is damaged, try playing other music. If the file has been damaged, could lead to serious noise.

● **Basic Function**

No.	Function list	
1	Music	MP3 、 WMA、 FLAC、 WMV、 OGG and AAC.
2	E-book formats	PDB、 EPUB、 UMD、 PDF、 TXT、 HTML、 HTM
3	Video	MKV、 AVI、 RM、 RMVB、 MP4、 MOV、 VOB、 DAT、 FLV、 3GP、 ASF、 H.264 video format play ,full screen play display
4	Picture browsing	Support JPG,BMP,GIF
5	TF card	Support up to 16GB
6	System information	support
7	Record function	Support Voice record
9	TTS	Txt to Speech(optional) Chinese, English only
10	File explorer	